



# STANDARDISED SOLUFORM MSE BAGWORK DETAILS

## SIMPLE WALLS AND SLOPES


### VERTICAL WALL

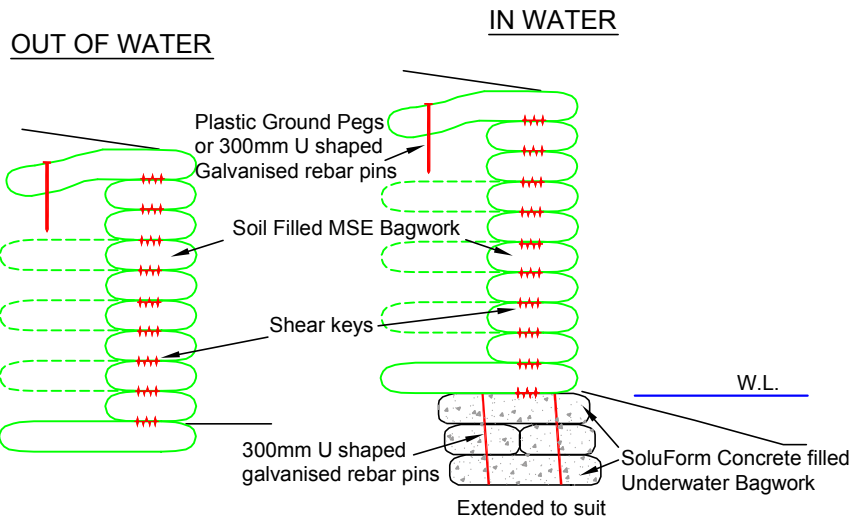


### 2 IN 1 SLOPE

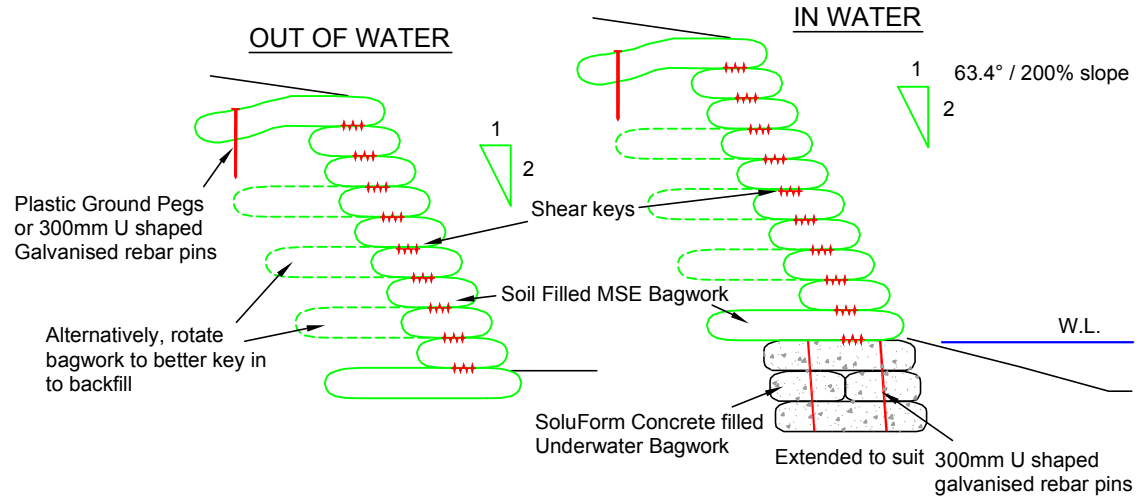

### 4 IN 1 SLOPE

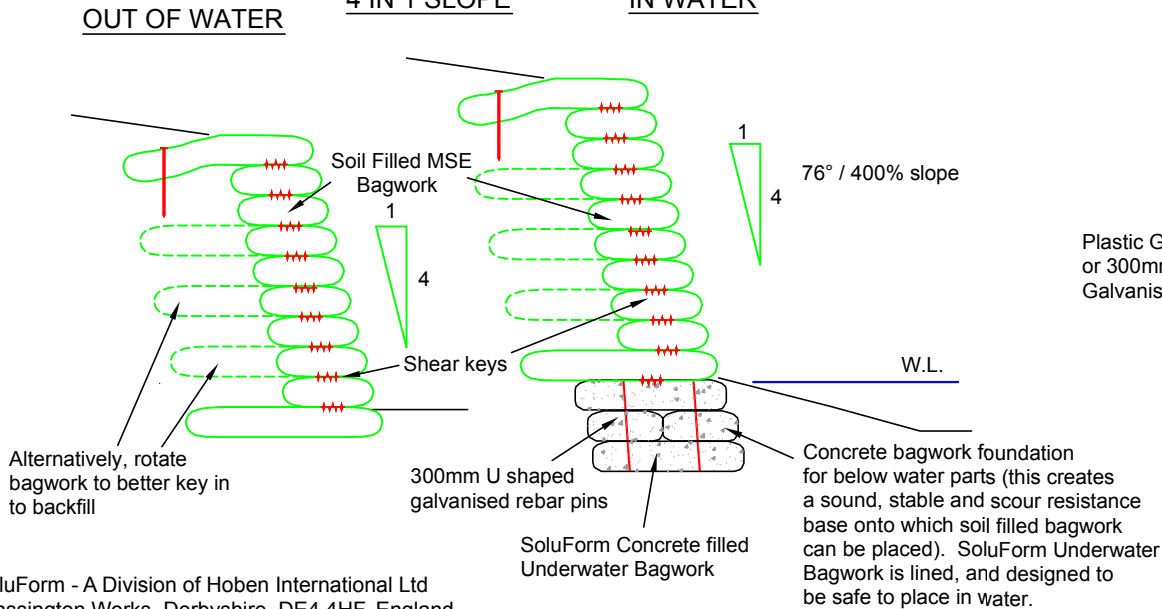

### 1 IN 1 SLOPE

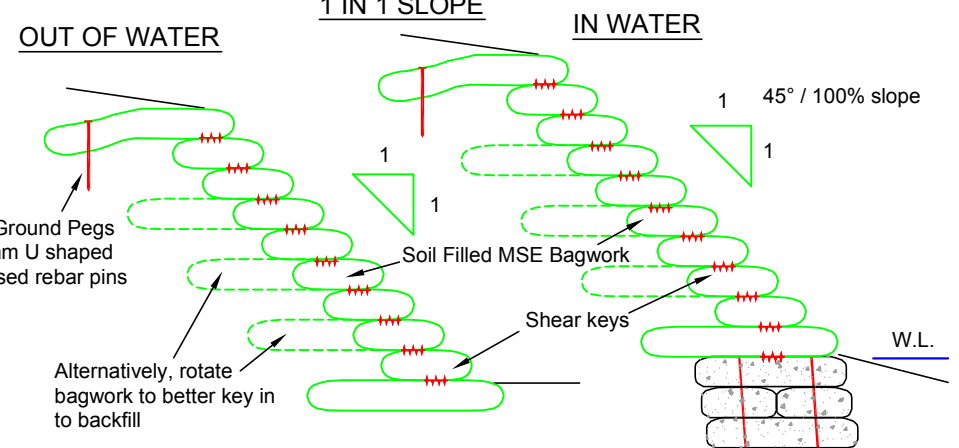

The drawing is intended for design guidance only. It is provided as a general guide, is none site specific and should not be relied upon in any way. Any design or proposed use of prefilled soil or concrete filled bagwork should be undertaken by a suitably qualified and experienced Engineer.